

Bracket / Holder for OLD Enduro Saddle Bags ready for BMW R50 – R69S

Hello,

We have finished a mounting system for older/original Enduro saddlebags. It is a excellent upgrade for these classic Bags, and installation is very easy. 😊




1. Remove all original brackets, and plug holes accordingly .
2. Install the new upper bracket (2 holes) near shock absorber mount.
3. Install the new bottom bracket to frame.



4. Put the bags into the holders , mark, and drill hole when properly aligned. Install supplied wing nut for attachment. If bags are not in excellent condition, a fender washer might be needed .



5. Installed both inox pins to upper Bracket and mark hole , then remove bags and drill a 6 mm hole.
6. Attach both pins, and place bags onto brackets.
7. Sometimes - because of different Frames, you may need to add a spacer or washers. When finished install bracket, if necessary, you may need to slightly bend - to adjust.
8. When you make hole for pin and screw then add plate, similarly to the original.

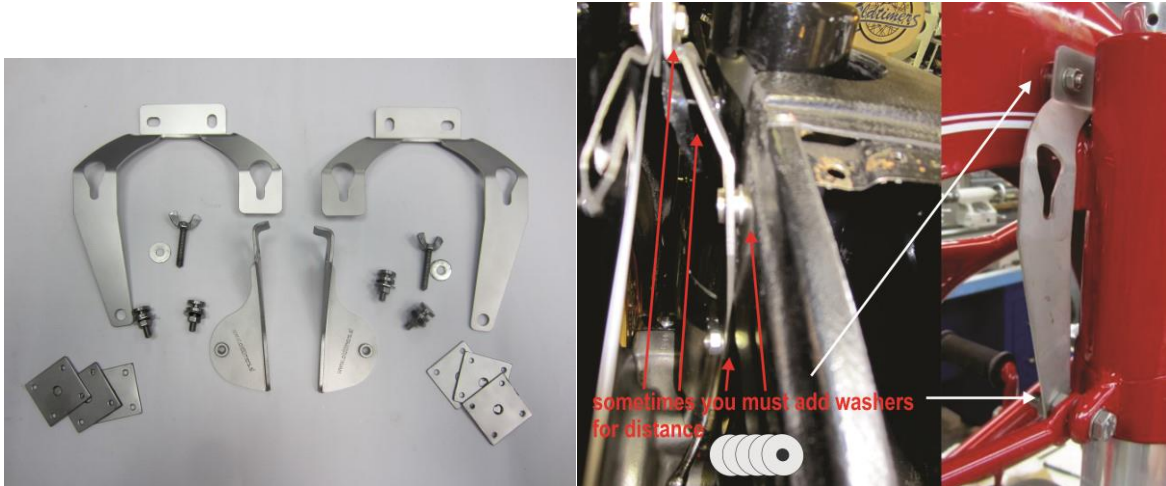

Don't forget use Loctite for fix two upper attachments , BUT DO NOT use on Wing Nut, little Protection /fixing Screw.

IF YOU NEED TO REMOVE ENDURO SADDLE BAGS, OPEN LID DOOR , UNSCREW WING NUT, (PROTECTION SCREW), AND REMOVE THE BAGS

Enjoy , regards Oldtimers Team

