

# Saddle Bags assembly instructions



Saddle bags ready for BMW R26+R27 and R50-R69S



**U** Saddle bags RAW-Unpainted matt grey  
U50

**G** Saddle bags Glossy - Shine Black SET  
G50

**L** Saddle bags with imitation of soft *Leather*  
*on surface* SET  
LIKE ON SIXTIES **NEW on 2022** L50

Thank you for trusting us and purchasing our product !

## Set of our Saddlebags contains:

Left and Right side Saddle bags  
with a built-in lock and two identical keys



two connecting three-wire  
cables with connectors



two red lights with  
12 Volt bulbs



brackets - hardware - mounting kit



white or black self-adhesive strip lines




# Saddle Bags assembly instructions




## Saddle bags ready for BMW R26+R27 and R50-R6S

1. Installing the upper bracket - UB on the fender and the bottom bracket - BB on the rear frame

brackets - hardware - mounting kit

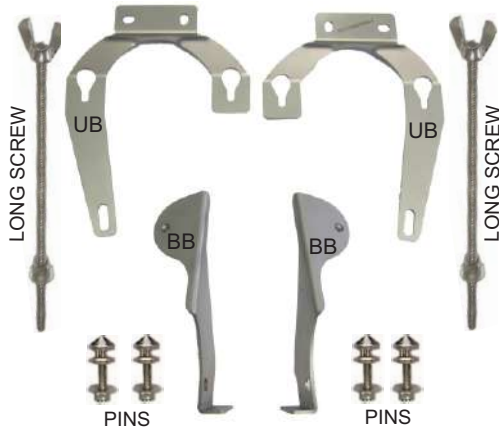


## Installations manuals / Installationsanleitung

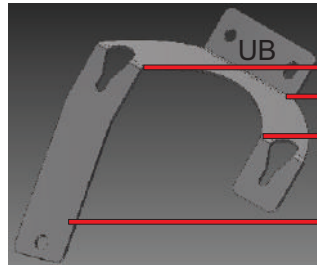

Adjust /  
Anpassen  
0 +/- 3%




A Cut / Schnitt cca 0-3mm must be closed between the frame and the exhaust  
B Cut / Schnitt cca 0-3mm muss geschlossen werden dem rahmen und auspuff

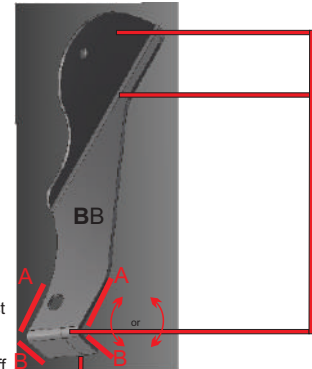



Adjust /  
Anpassen  
0 +/- 3%

Adjust / Anpassen  
open/offen

the upper bracket - UB on the fender

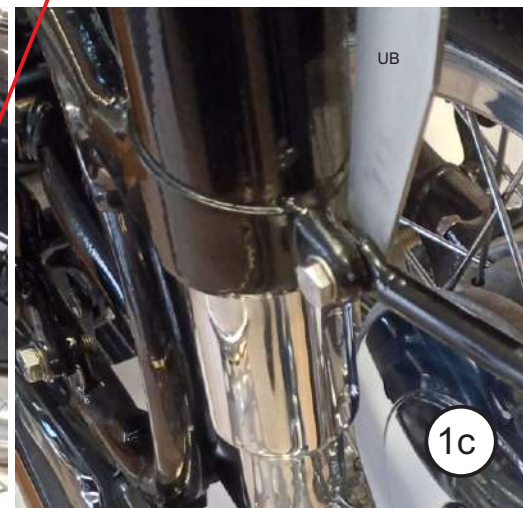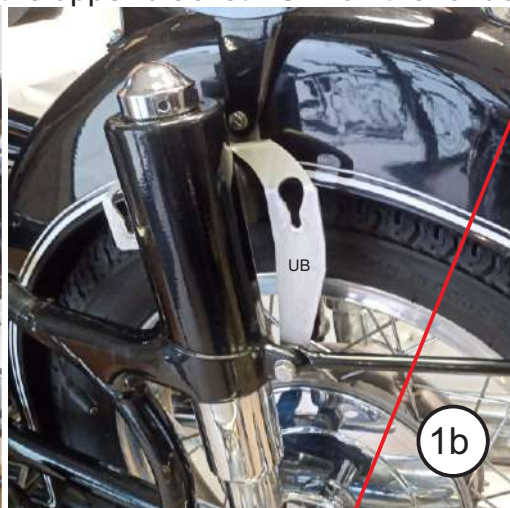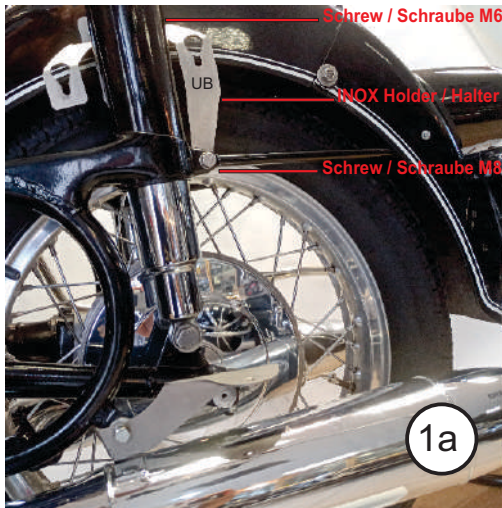

the bottom bracket - BB on the rear frame

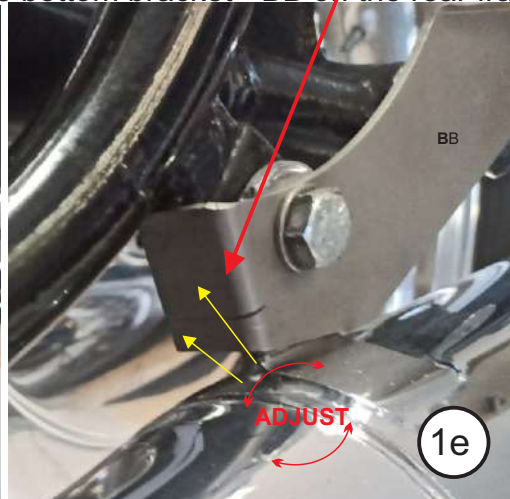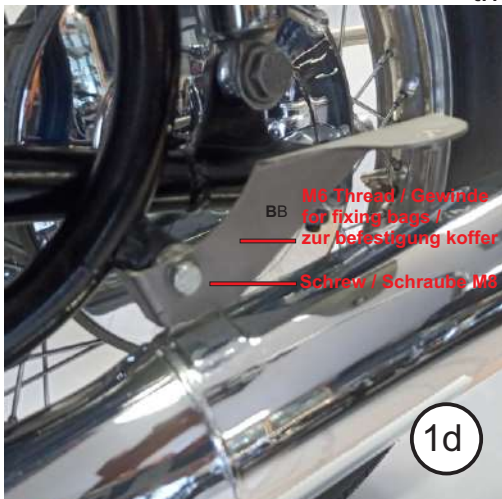



# Saddle Bags assembly instructions



## BULL BARS / Schutzbügel ready for BMW R50-R69S

**OPTION** - in case you also bought the BULL BARS - protection for Bags



you can see more on our website or copy the link :


<https://oldtimers.si/en/bull-bars-schutzbuegel.html>

### 2. Installing Saddle Bags with Pins -PI and Long screws LS


Tape part of the back top side of Saddle bags with self-adhesive masking tape for easier marking



Cut a 100 x 50 mm square from 5 mm thick cardboard for the spacer

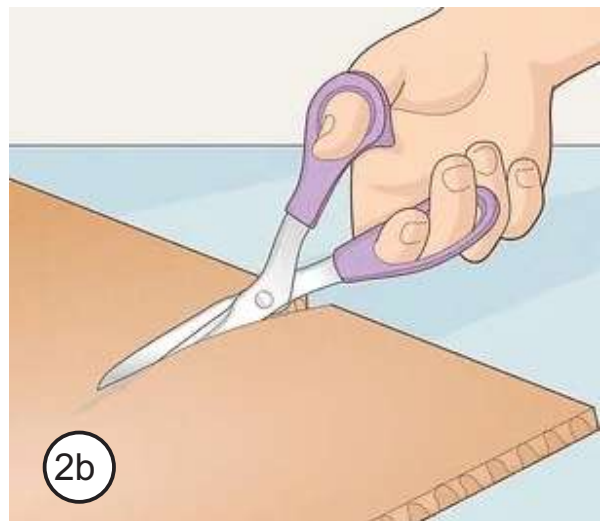

and make a fi 6 mm hole in the cardboard

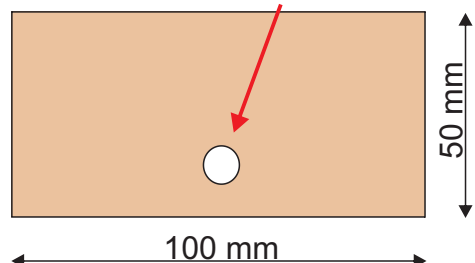

Aus dicker Pappe kann ein 5-Millimeter-Abstandshalter geschnitten werden






# Saddle Bags assembly instructions



## Saddle bags ready for BMW R26+R27 and R50-R6S


5 mm thick cardboard spacer placed between the Saddle bags and the bottom bracket and screw lightly with a long screw

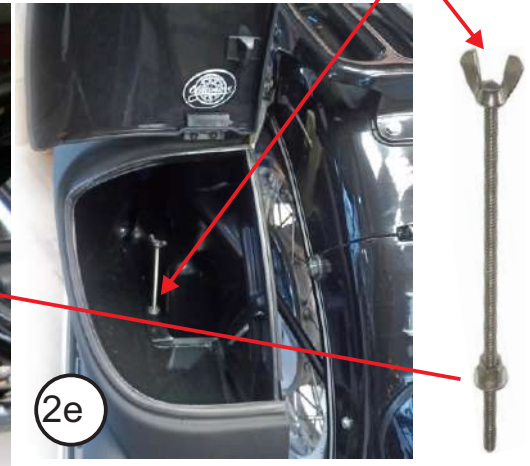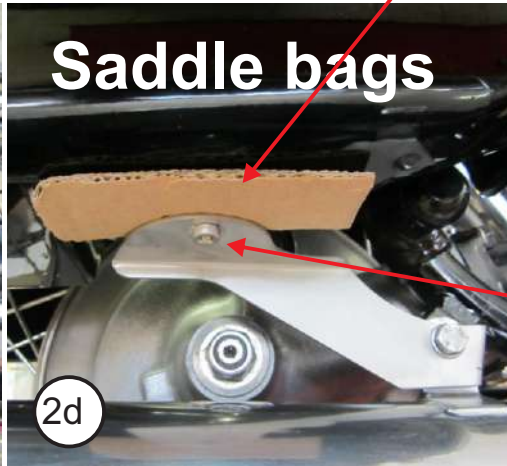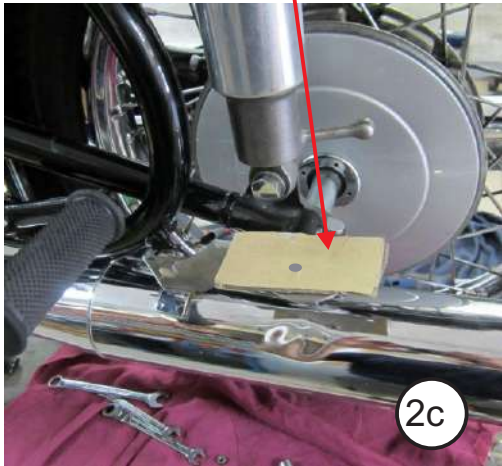


The Saddle bags are attached with self-adhesive masking tape

Install Saddle bags evenly left and right

find an M6x40 screw at home and grease it at the end

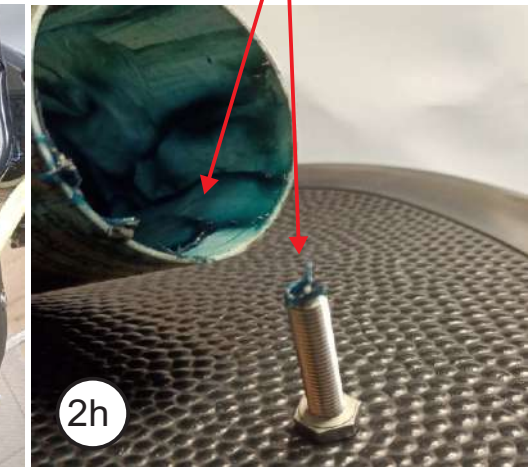

press the screw through the top bracket with your fingers Left and Right side and you can see the grease imprinted on the self-adhesive masking tape

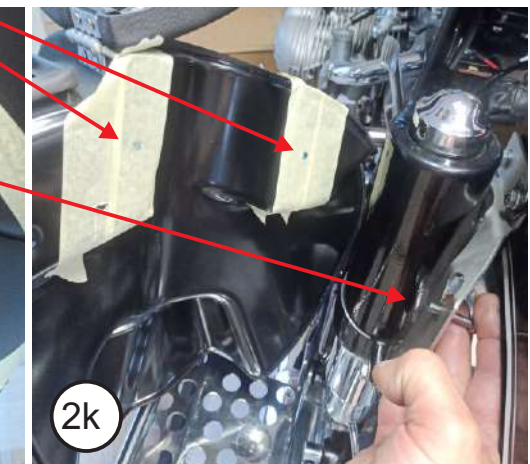




# Saddle Bags assembly instructions




## Saddle bags ready for BMW R26+R27 and R50-R69S

Mark the holes with a pencil and drill holes of 6 mm

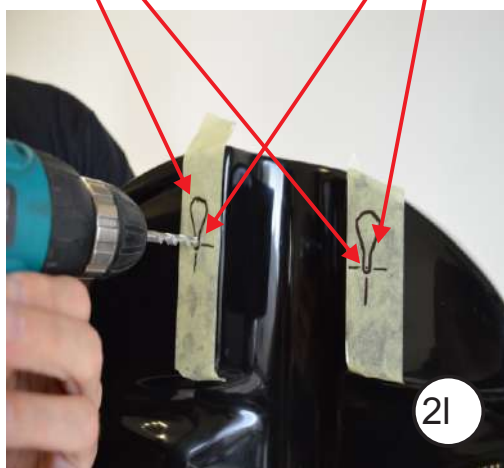

Insert the threaded pins from the outer back side of the saddle bags and screw the M6 nut with washer on the inner back of the saddle bags

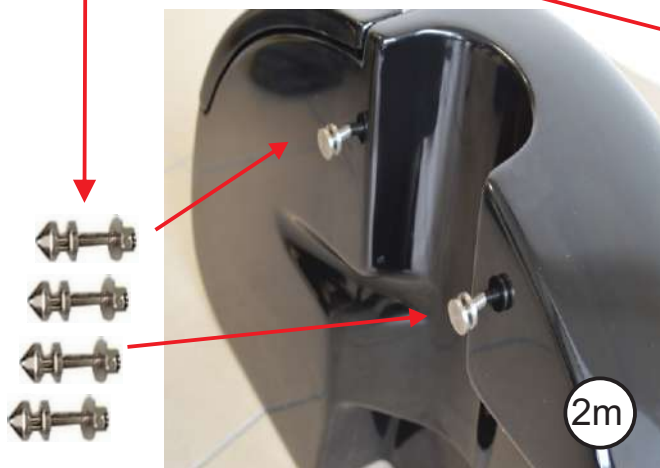

Remove 5 mm thick cardboard spacer placed between the Saddle bags and the bottom bracket and fasten with a long screw



For BMW R26-R27 we have ready different lower holder



Repeat this on the other side of the Saddle bags and you win, congratulations

**SEND FOTO ,WE WILL ADD TO OUR FANS GALLERY**

**important - support**

How to install white or black strip lines, copy link :

<https://oldtimers.si/en/white-black-strip-lines.html>

How to install electrical wiring and rear light connection, copy link :

<https://oldtimers.si/en/electrical-wiring-diagram-and-rear-light-connection.html>



Best regards Oldtimers TEAM

09/2022  
page 6/6